BOSE®

mobile in-ear headset

Owner's Guide
Brugervejledning
Bedienungsanleitung
Guía de usario
Omistajan opas
Notice d'utilisation
Felhasználói útmutató
Manuale di istruzioni
Gebruiksaanwijzing
Podręcznik użytkownika
Bruksanvisningen
คู่มือผู้ใช้
사용자 안내서
用户指南
دليل المالك

English

Welcome

Thank you for purchasing the Bose® mobile in-ear headset. The Bose® mobile in-ear headset offers a combination of lifelike audio performance and comfortable fit not available from most conventional earbuds.

Register your product

Now is a good time to register your headset. You can do this easily by going to **http://global.Bose.com.**

CE This product conforms to the EMC Directive 89/336/EEC. The complete Declaration of Conformity can be found at **http://www.Bose.com/compliance**.

©2009 Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permission. All trademarks referenced herein are property of Bose Corporation.

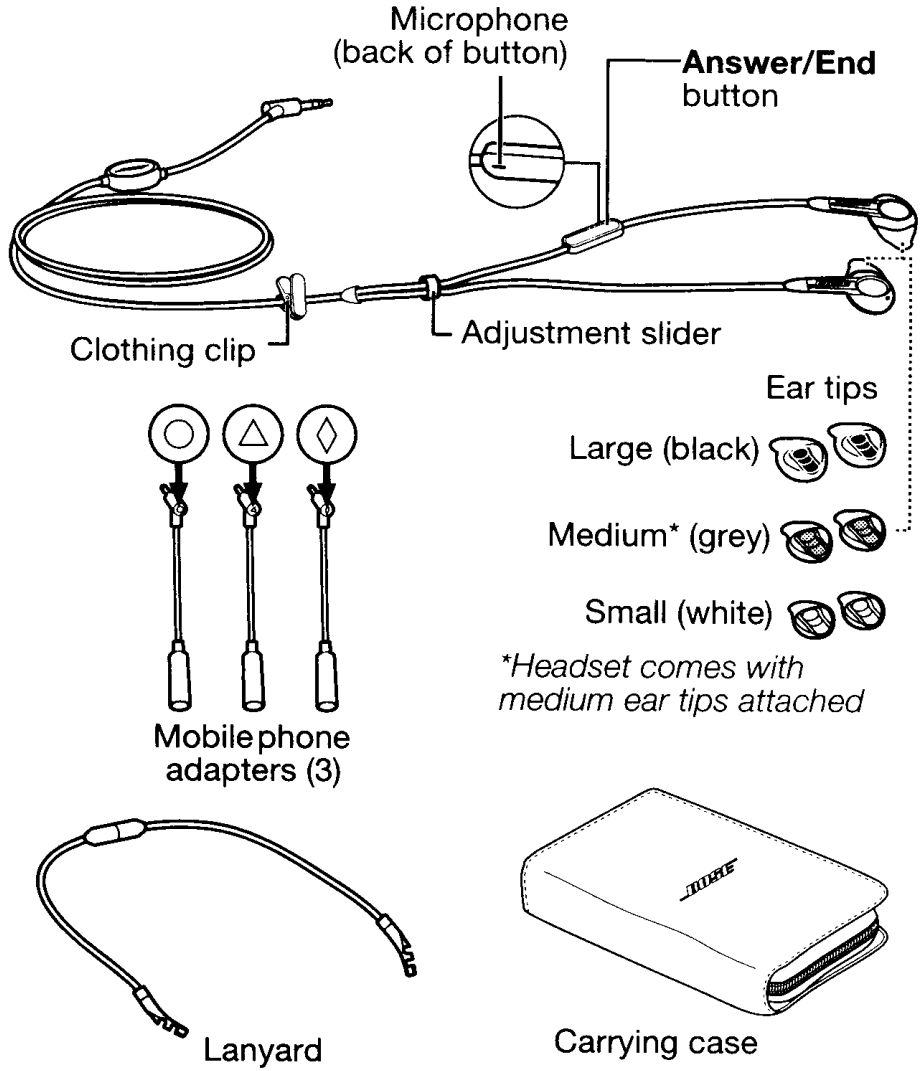

English

Connecting to a mobile phone or audio device

You can connect the headset to your mobile phone with either the 3.5 mm stereo plug (compatible with standard headphone jacks) or by using one of the three included 2.5mm adapter cables if needed.

The correct connection should allow:

- Stereo sound to be heard during music playback and communications
- Your voice to be heard by the person on the other end of a phone call
- The Answer/End button to operate as expected

Compatible with many music-enabled moble phones. Refer to the enclosed compatibility list or visit **www.Bose.com/phones** for the latest list of compatible phones.

Without adapter

If your phone has a 3.5mm headphone/headset jack, you do not need to use the included adapters.

Device with 3.5mm headphone/ headset jack

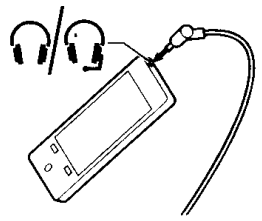

1. Plug the headset into the headphone/headset jack on the phone.
2. Put on the headset.

With adapter

The Bose® mobile in-ear headset includes three unique phone adapters. Each one is identified by a small symbol (circle, diamond, triangle) on the top of the plug.

If your phone has a 2.5mm headphone/headset jack, you will need to use one of these adapters.

Refer to **www.Bose.com/phones** to determine which adapter is compatible with your phone.

Device with 2.5mm headphone/ headset jack

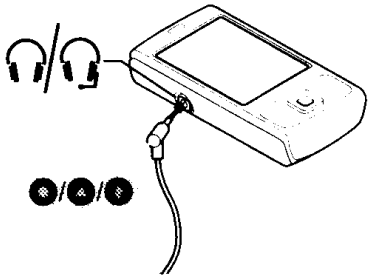

1. Select the appropriate adapter.
2. Attach the adapter to the headset cable
3. Plug the headset with the adapter into the headphone/ headset jack on the phone.
4. Put on the headset.

Note: *If your phone does not respond when you press the Answer/End button, you are getting partial or no sound, or the microphone is not picking-up sound, you may be using the wrong adapter. Refer to* **www.Bose.com/phones** *to determine which adapter is compatible with your phone.*

Answering and ending calls

The Bose® mobile in-ear headset includes an easy to access Answer/End button with integrated microphone. Simply press the Answer/End button to perform an action.

Note: *Some phones may require you to press and hold the Answer/End button for a few seconds to perform functions.*

Answering calls

When you receive an incoming call, press and release the Answer/End button to answer.

Ending calls

When you are ready to end your call, press and release the Answer/End button.

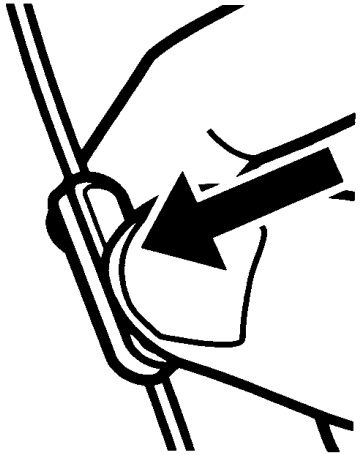

Note: *Some unique phone and music playback functions, like last number redial, voice commands, and track navigation are device-dependant, and may be accessible using the Answer/End button. Refer to your mobile phone user's manual to find out what features are available.*

Using a single earpiece

The Bose® mobile in-ear headset can be used with only the right (R) earpiece in your ear. This allows you to take calls and still hear surrounding sounds.

Importance of Proper Fit

The Bose® mobile in-ear headset is designed to rest comfortably in the bowl of the ear. The soft silicone ear tip provides enough contact to secure the headset in place comfortably. Three sizes of ear tips are provided to help you customize the headset to your individual needs. **Do not** attempt to wear the headset without the ear tips.

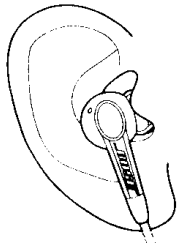

Correct

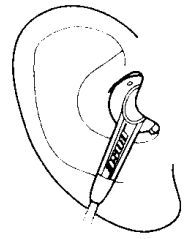

Incorrect

Changing ear tips

Gently remove the existing ear tip by peeling up from its large rounded side. Slide the new ear tip over the nozzle of the headset. Press the ear tip securely into place until you feel it latch.

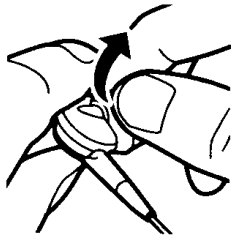

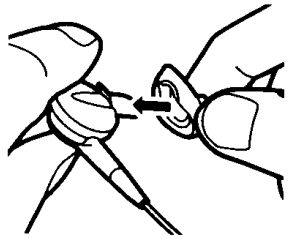

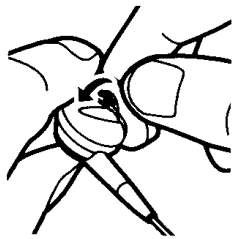

English

Adjusting for comfort and stability

There are several ways you can change your headset to provide additional comfort and stability. Using the adjustment slider, the clothing clip, and lanyard stability accessories, you can customize how you wear your headset.

Using the adjustment slider

Move the adjustment slider up or down to reduce or increase the amount of loose cord between the left and right earpiece. Finding the right position for the slider can help optimize the placement of the Answer/End button and integrated microphone.

Using the clothing clip

Use the clothing clip to fasten the cable to your clothing, for convenience, stability, and to help manage the cable. This can be helpful during high-movement activities or when using the headset in a single earpiece configuration.

The clothing clip should be attached below the Y-joint and be positioned to allow natural head movement, while keeping the microphone near your mouth.

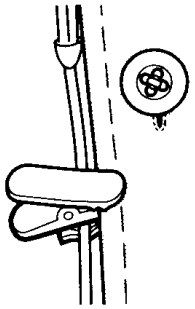

Using the lanyard

The included lanyard provides additional stability to your headset. You can use the lanyard on its own, or with the clothing clip for even greater stability.

1. Attach the headset cord through the right (R) and left (L) lanyard connectors below the microphone and approximately 10 inches (25.4 cm) below each ear piece.

   Make sure the L and R marks point up toward the ear pieces.

2. Pull the lanyard over your head and allow it to rest behind your neck.
3. Adjust the lanyard connectors have enough slack above the lanyard connectors so that any downward pulls on the plug end of the cord are not felt in the ears.

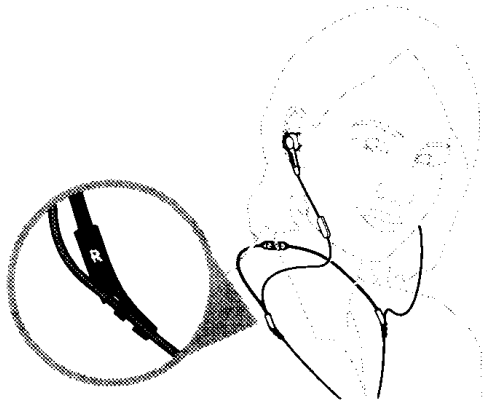

Note: *Lanyard has a built-in safety release that separates when forcefully pulled.*

Troubleshooting

If you experience any trouble using your headset, try the following troubleshooting instructions. If you still need help, see the contact information on the inside back cover for assistance in your area.

Problem	What to do
No audio/Intermittent	Make sure that the headset plug is securely connected to the headphone/headset jack (not the line out jack).
Sound is coming from only one earpiece	Make sure you are using the correct mobile phone adapter and that it is securely connected.
Excessive bass	Turn off any audio enhancement features on the audio source.
Low volume/poor audio	Turn off any "sound checker" or other audio signal altering features on the audio source.
Microphone is not picking-up sound	• Make sure you are using the correct mobile phone adapter and that it is securely connected. • Make sure the microphone is not being blocked or covered *The microphone is located on the back of the Answer/End button (you may notice the small opening for the microphone).*
Phone not responding when Answer/ End button is pressed	Make sure you are using the correct mobile phone adapter and that it is securely connected. ***Note:*** *Some phones may require you to press and hold the Answer/End button for a few seconds to perform functions.*
Phone unexpectedly ends call	Some phones will end a call if the headset is unplugged during a call. Make sure that the headset plug is securely connected to the headphone/headset jack.
Ear tips falling off	Make sure the ear tips are securely attached to the housing.
Lost ear tip	Contact service representatives (on back page) to order replacements.
Sound is muffled from earpiece	Make sure ear tips and headset nozzles are clear of any debris or wax build-up.

English

Cleaning

Your headset may require periodic cleaning:

- Ear tips: First, remove them from the headset and wash the tips with a mild detergent and water. Make sure you thoroughly rinse and dry them before putting them back on the headset.
- Headset nozzles, Microphone, Answer/End button: Clean only with a dry, soft cotton swab or equivalent. Never insert any cleaning tool into the nozzle or microphone opening.
- Lanyard: Detach lanyard and wash with mild soap and water.

WARNINGS:

- *Contains small parts which may be a choking hazard. Not suitable for children under age 3.*
- *This product contains magnetic material.*
- *Long-term exposure to loud music may cause hearing damage. It is best to avoid high volume levels when using headphones, especially for extended periods.*
- *Except when used in single earpiece configuration, do not use this headset when operating a motor vehicle on a public road, or where the inability to hear outside sounds may present a danger to you or others.*

CAUTIONS:

- *Sounds that you rely on as reminders or warnings may have an unfamiliar character when using headphones. Be aware of how these sounds may vary in character so you can recognize them as needed.*
- *Do not drop, sit on, or allow the headset to be immersed in water.*

Limited Warranty

Your Bose® mobile in-ear headset is covered by a limited transferable warranty. Details of the limited warranty are provided on the product registration card that is included in the carton. Please refer to the card for instructions on how to register. Failure to register will not affect your limited warranty rights.

What you must do to obtain Limited Warranty Service:

Return product, with proof of purchase from an authorized Bose dealer, using the following procedures:

1. Visit **http://global.Bose.com** or contact your local authorized Bose dealer to identify the location of the nearest authorized Bose service facility;
2. Contact the authorized service facility for specific return and shipping instructions;
3. Label and ship the product, freight prepaid, to the address provided by the authorized service facility; and
4. Place any necessary return authorization number prominently on the outside of the carton. Cartons not bearing a return authorization number, where required, will be refused.

BOSE CORPORATION

Australia
Unit 3/2 Holker St.Newington
NSW, 2127
1800 023 367
www.Bose.com.au

Belgique/Belgie
B-3700 Tongeren
012-390800

China
2203-2305 22F, West Gate
Tower/1038 West Nanjing
Road-MeiLongzhen Plaza,
Shanghai, 200041
86-22-62713000 ext. 162
www.Bose.cn

Denmark
2605 Brondby
04343-7777
www.Bose.dk

Deutschland
D-61381 Friedrichsdorf
06172-71040
www.Bose.de

France
78100 Saint Germain en Laye
01-30616363
www.Bosefrance.fr

India
Shriram Bhartiya Kala Kendra,
1 Copernicus Marg, New Delhi,
100-001
91-11-2307-3825-3826-3827
www.Boseindia.com

Ireland
Castlebury Road,
Carrickmacross, Co
Monaghan
042-9671500
www.Bose.ie

Italia
Via della Magliana 876
Roma, 00148
06.60.292.555
www.Bose.it

Japan
Karakida Center bldg., 1-53-9
Karakida, Tama-shi, Tokyo,
2060035
81-423-575250
www.Bose.co.jp

Mexico
Paseo de las Palmas # 405,
11000
52-55-52-02-35-45
FAX: 52-55-52-02-41-95

Nederland
1135 GE Edam
0299-390111
www.Bose.nl

New Zealand
0800 501 511
www.Bose.co.nz

Norge
N-2213 Kongsvinger
62-82-15-60
www.Bose.no

Österreich
Wienerbergstrasse 7 (10.OG)
01-60404340
www.Bose.at

Schweiz
Hauptsrasse 134
061-9757733
www.Bose.ch

Sverige
S-43153 Mölndal
031-878850
www.Bose.se

United Kingdom
1 Ambley Green,
Gillingham Business Park,
Gillingham, Kent, ME8 ONJ
0780-741-4500
Info_uk@Bose.com

Hong Kong
Suite 1203, Midas Plaza, 1 Tai Yau Street, San Po Kong,
Kowloon, Hong Kong
(852) 21239000
support_hk@Bose.com

Finland
Kornetintie 6b Helsinki, 380
+358 10 778 6900
www.Bose.fi

Poland
ul. Woloska 12
Warszawa, 02-675
+48 (0)22-8522928
www.Bose.pl

Canada
9133 Leslie Street,
Suite 120, L4B 4N1
800-465-2673
www.Bose.ca

For Replacement Tips:
800-819-7032

USA
The Mountain,
Framingham, MA, 01701
800-367-4008
508-766-1900
www.Bose.com

For Replacement Tips:
www.Bose.com

World Wide Web
www.Bose.com
www.Boseeurope.com

316835-0010

BOSE®

Better sound through research®

©2009 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA
AM316835 Rev.00

MOBILE PHONE COMPATIBILITY GUIDE

No adapter required **No adaptador requerido** **Aucun adapteur requis**			
Apple iPhone	Nokia 6300	LG Voyager	Blackberry 8800
Blackberry Curve	Nokia 5300	LG Venus	Blackberry 8830
Blackberry Pearl series (excl. 8100)	Nokia 6120 Classic	LG Decoy (VX8610)	Blackberry Pearl 8100
Blackberry Pearl Flip	Nokia E51	LG enV 2 (VX9100)	
Blackberry Storm	Nokia 6500 Slide	LG Chocolate 2 (VX8559 LK)	
LG Dare (VX9700)	Nokia E71	LG Chocolate (VX8500/TG800)	
LG Chocolate 3 (VX8560)	Nokia 6220 Classic	LG VX8100	
Motorola Rokr	Nokia E62	LG VX8300	
Motorola Krave	Nokia 3500	Samsung A920	
T Mobile Sidekick	Palm Treo 500	Motorola Rizr Z6TV	
	Palm Treo 650	Motorola Q series	
	Palm Treo 680	LG enV (VX9900)	
	Palm Treo 700w/wx	LG VX9400	
		LG VX8600	
		LG VX8700	
		Motorola E815	
		Motorola V360	
		Motorola V710	
		Samsung A940	
		Samsung A970	

If your phone is not listed, contact Bose at 800-905-2113 or visit www.Bose.com/phones.
Si su teléfono no figura en la lista, contacte con Bose al 800-905-2113 o visite www.Bose.com/phones.
Si votre téléphone n'apparaît pas dans la liste, contactez Bose au 800-905-2113 ou visitez la page www.Bose.com/phones.

321431-0010

BOSE
Better sound through research.

©2009 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA AM321431 Rev.01

Visite Global.Bose.com para obtener información de contacto en su país/region.

EE.UU., Puerto Rico e Islas Vírgenes de EE.UU. Enlace directo para registrarse: www.Bose.com/register

Canada. Enlace directo para registrarse: www.Bose.ca/register

Europa. Enlace directo para registrarse: www.register.Bose.eu

Envíe cualquier correspondencia en relación con información de productos o los servicios de la Garantía limitada a la sede corporativa de la empresa en:

Registro del producto
Bose Corporation
The Mountain
PO Box 9168
Framingham, MA 01701-9168 EE.UU.

1-800-736-5076 (EE.UU.)
1-508-766-1000 (INTL) *Es posible que se apliquen cargos por la llamada. Tenga a mano el número de serie cuando realice la llamada.*

Los propietarios que vivan fuera de los Estados Unidos deben revisar la Guía del usuario o ir a Global.Bose.com para encontrar la dirección más cercana.

GARANTÍA LIMITADA

A quién cubre:
Esta garantía se extiende únicamente al comprador final original o a la persona que reciba el producto como regalo y no se extenderá a cualquier otra persona o beneficiario.

Qué se cubre/Por cuánto tiempo:
A menos que un período de garantía diferente se explicite en la Guía del usuario provista con su producto Bose,® por un período de 1 año (2 años en la UE.) [5 años para altavoces no eléctricos incorporados en el producto] a partir de la fecha de la compra minorista por parte del usuario final original, Bose garantiza que este producto, cuando se le entrega en su paquete original y en nueva condición, por parte de un revendedor autorizado por Bose y es utilizado en condiciones normales, no tiene defectos de fabricación, de materiales ni de producción.

Qué es lo que no se cubre:
Esta garantía no cubre defectos ocasionados por prácticas de uso o mantenimiento incorrectas o no razonables, el incumplimiento de las instrucciones de uso; accidentes; humedad excesiva; insectos; rayos; subidas de tensión; conexión a voltaje incorrecto; alteraciones o modificaciones no autorizadas del producto original; daños causados por embalaje o proceso de envío inapropiado; pérdida, daño o alteración de la información guardada; daños ocasionados por el uso con productos que no sean de Bose; productos que requieren de modificación o adaptación para permitir que se utilicen en cualquier país fuera del país para el que fueron diseñados, fabricados, aprobados y/o autorizados, o reparación de productos dañados por estas modificaciones; y productos adquiridos de vendedores no autorizados.

Qué haremos:
Durante el período de garantía repararemos o sustituiremos, a nuestra discreción, las partes defectuosas en un período razonable de tiempo y sin cargo.

Qué es lo que no haremos:
Pagar cargos por envío, seguros o transporte del producto de usted a nosotros, tasas de importación o impuestos.

Qué debe hacer para obtener el servicio de la Garantía limitada:
Devuelva el producto con el comprobante de compra emitido por un vendedor autorizado de Bose, realizando los siguientes pasos:

1. Contáctese con la compañía Bose en su país/región (visite Global.Bose.com para obtener información de contacto en su país/región) a fin de obtener instrucciones específicas sobre devolución y envío;
2. Rotule y envíe el producto, con flete pago, a la dirección de la compañía Bose en su país; y
3. Coloque cualquier número de autorización para la devolución que sea necesario en forma visible y en la parte exterior del paquete. Los paquetes que no tengan un número de autorización de devolución, cuando sea necesario, serán rechazados.

Otras condiciones:
LAS DISPOSICIONES DE ESTA GARANTÍA LIMITADA REEMPLAZAN CUALQUIER OTRA GARANTÍA, YA SEA EXPRESA O IMPLÍCITA, ESCRITA U ORAL, INCLUYENDO CUALQUIER GARANTÍA DE COMERCIABILIDAD O ADECUACIÓN A UN FIN PARTICULAR. LA RESPONSABILIDAD MÁXIMA DE BOSE CORPORATION NO PUEDE EXCEDER EL PRECIO DE COMPRA REAL QUE USTED PAGÓ POR EL PRODUCTO. BAJO NINGUNA CIRCUNSTANCIA SERÁ BOSE RESPONSABLE POR LA PÉRDIDA, DAÑO O ALTERACIÓN DE INFORMACIÓN GUARDADA O POR DAÑOS ESPECIALES, INCIDENTALES, EN CONSECUENCIA O INDIRECTOS CUALQUIERA SEA LA CAUSA DE LOS MISMOS, INCLUYENDO SIN LIMITACIÓN, EL REEMPLAZO DE EQUIPOS Y PROPIEDADES Y CUALQUIER COSTO DE RECUPERACIÓN, PROGRAMACIÓN O REPRODUCCIÓN DE CUALQUIER PROGRAMA O INFORMACIÓN GUARDADA O UTILIZADA CON SU PRODUCTO BOSE. Esta garantía se anula en caso de que la etiqueta con el número de serie haya sido quitada o dañada.

Otros derechos legales:
Esta garantía limitada le otorga derechos legales específicos y es posible que también se le otorguen otros derechos que varían según los estados o países. Algunos lugares no permiten limitaciones en garantías implícitas o la exclusión o limitación por daños secundarios o resultantes, por lo que es posible que las limitaciones o exclusiones anteriores no se apliquen a usted.

En caso de que no registre su producto no se verán afectados sus derechos de garantía limitada.

Consultez le site Global.Bose.com pour connaître les coordonnées de Bose dans votre pays ou region.

États-Unis, Puerto Rico et Îles Vierges des États-Unis. Liens directs vers les sites d'enregistrement : www.Bose.com/register

Canada. Liens directs vers les sites d'enregistrement : www.Bose.ca/register

Europe. Liens directs vers les sites d'enregistrement : www.register.Bose.eu

Pour toute correspondance relevant d'une demande de renseignements au sujet de nos produits ou de nos services de garantie limitée, veuillez nous écrire à notre siège social, à l'adresse suivante :

Enregistrement de produits
Bose Corporation
The Mountain
PO Box 9168
Framingham, MA 01701-9168 États-Unis

1-800-736-5076 (États-Unis)
1-508-766-1000 (international) *Des frais peuvent s'appliquer. Veuillez avoir en main votre numéro de série lors de l'appel.*

Si vous résidez hors des États-Unis, consultez le guide de l'utilisateur ou le Global.Bose.com pour obtenir l'adresse postale la plus proche.

GARANTIE LIMITÉE

Bénéficiaire :
La présente garantie est uniquement valable pour le premier acheteur ou la personne ayant reçu le produit en cadeau et ne peut en aucun cas être étendue ou transférée à une autre personne.

Objet et durée de la garantie :
À moins qu'une durée différente ne soit indiquée dans le guide de l'utilisateur fourni avec le produit, Bose® garantit pendant une période d'un an (deux ans dans l'UE) [cinq ans pour tout haut-parleur non amplifié intégré au produit], à partir de la date d'achat au détail par le premier acheteur, que le produit est libre de tout vice de matériaux et de fabrication lorsqu'il est livré à l'état neuf, dans son emballage d'origine et par un détaillant autorisé Bose, et qu'il est utilisé dans des conditions normales.

Exclusions :
La présente garantie ne couvre pas : les défauts ou dommages résultant d'une utilisation ou d'un entretien inapproprié ou incorrect, du non-respect des directives d'utilisation, d'un accident, d'une humidité excessive, de la présence d'insectes, de la foudre, d'une pointe de courant électrique, d'un raccordement à un courant électrique d'une tension incorrecte, d'une altération ou d'une modification du produit, de procédures d'emballage ou d'expédition inappropriées; la perte, l'altération ou la détérioration de données informatiques; les dommages causés par l'utilisation avec un produit d'une marque autre que Bose; les modifications ou adaptations effectuées au produit pour qu'il soit utilisable dans un pays autre que celui pour lequel il a été conçu, fabriqué, approuvé et/ou autorisé, de même que la réparation d'un produit endommagé par ces modifications; les produits achetés auprès d'un détaillant non agréé.

Notre engagement :
Au cours de la période de garantie, à notre seule discrétion, nous réparerons ou remplacerons toute pièce défectueuse dans un délai raisonnable, sans frais.

Frais exclus :
La garantie ne couvre pas le paiement des frais d'expédition, d'assurance et de transport du produit vers notre adresse, ainsi que de toutes taxes et de tous droits d'importation ou autres.

Conditions de l'obtention des services de garantie limitée réparation :
Expédiez-nous le produit, accompagné de la preuve d'achat d'origine d'un détaillant Bose autorisé, en suivant les directives ci-dessous :

1. Communiquez avec l'entité Bose de votre pays ou région (consultez le site Global.Bose.com pour connaître les coordonnées de Bose dans votre pays ou région) pour obtenir les instructions de retour et d'expédition particulières;
2. Étiquetez et expédiez le produit, en port payé, à l'adresse fournie par l'entité Bose de votre pays ou région; et
3. Inscrivez de façon très visible sur l'extérieur de l'emballage tout numéro d'autorisation de retour nécessaire. Un envoi qui ne comporte pas de numéro d'autorisation de retour lorsque celui-ci est requis sera refusé.

Autres conditions :
LES CONDITIONS DE LA PRÉSNTE GARANTIE LIMITÉE REMPLACENT TOUTE AUTRE GARANTIE, EXPRESSE OU IMPLICITE, EXPRIMÉE PAR ÉCRIT OU ORALEMENT, Y COMPRIS TOUTE GARANTIE DE QUALITÉ MARCHANDE OU D'ADAPTATION À UN USAGE PARTICULIER. LA RESPONSABILITÉ MAXIMALE DE BOSE CORPORATION ÉQUIVAUT AU PRIX PAYÉ PAR LE CONSOMMATEUR À L'ACHAT DU PRODUIT. BOSE NE PEUT EN AUCUN CAS ÊTRE TENUE RESPONSABLE DE LA PERTE, DE L'ALTÉRATION OU DE LA DÉTÉRIOATION DE DONNÉES INFORMATIQUES, NI DE DOMMAGES PARTICULIERS, ACCESSOIRES OU INDIRECTS, QUELLE QU'EN SOIT LA CAUSE, Y COMPRIS, SANS RESTRICTION, LE REMPLACEMENT D'ÉQUIPEMENT ET DE BIENS ET TOUS FRAIS DE RÉCUPÉRATION, DE PROGRAMMATION OU DE REPRODUCTION DE TOUT PROGRAMME OU DE TOUTES DONNÉES ENREGISTRÉS DANS LE PRODUIT BOSE OU UTILISÉS AVEC CELUI-CI. La présente garantie est annulée si l'étiquette portant le numéro de série est retirée ou altérée.

Autres droits :
La présente garantie limitée vous confère des droits particuliers selon la loi; vous pouvez aussi bénéficier d'autres droits qui varient selon votre pays ou région de résidence. Certains territoires ne permettant pas la limitation des garanties implicites ou l'exclusion ou la limitation des dommages indirects ou accessoires, il est donc possible que les limites ou exclusions ci-dessus ne s'appliquent pas à vous.

Le non-enregistrement du produit n'affecte aucunement vos droits en vertu de la garantie limitée.

Visit Global.Bose.com for Bose® contact information in your country/region.

US, PR, USVI. To link directly to registration: www.Bose.com/register

Canada. To link directly to registration: www.Bose.ca/register

Europe. To link directly to registration: www.register.Bose.eu

Send any correspondence regarding product information or Limited Warranty services to our corporate headquarters at:

Product Registration
Bose Corporation
The Mountain
PO Box 9168
Framingham, MA 01701-9168 USA

1-800-736-5076 (US)
1-508-766-1000 (INTL) *Charges may apply.*
Please have your serial number available when you call.

Owners living outside the United States should check the Owner's Guide or Global.Bose.com for the nearest mailing address.

LIMITED WARRANTY

Who is covered:
This warranty is extended only to the original end-use purchaser or the person receiving the product as a gift, and shall not be extended to any other person or transferee.

What is covered/For how long:
Unless a different warranty period is stated in the Owner's Guide provided with your Bose® product, for a period of 1 year (2 years EU) [5 years for any non-powered speakers that may be incorporated into this product] from the date of retail purchase by the original end-use purchaser, Bose warrants that this product, when delivered to you in new condition, in original packaging, from a Bose authorized reseller and used in normal conditions, is free from any defects in manufacturing, materials and workmanship.

What is not covered:
This warranty does not cover defects resulting from improper or unreasonable use or maintenance; failure to follow operating instructions; accident; excess moisture; insects; lightning; power surges; connections to improper voltage supply; unauthorized alteration or modification of original condition; damages caused by inadequate packing or shipping procedures; loss of, damage to or corruption of stored data; damages caused by use with non-Bose products; product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications; and products purchased from unauthorized dealers.

What we will do:
During the warranty period, we will, at our sole option, repair or replace any defective parts within a reasonable period of time and free of charge.

What we will not do:
Pay shipping, insurance or transportation charges from you to us, or any import fees, duties and taxes.

What you must do to obtain Limited Warranty Service:
Return product, with proof of purchase from an authorized Bose dealer, using the following procedures:

1. Contact the Bose organization in your country/region (visit Global.Bose.com for Bose contact information in your country/region) for specific return and shipping instructions;
2. Label and ship the product, freight prepaid, to the address provided by the Bose organization in your country; and
3. Place any necessary return authorization number prominently on the outside of the carton. Cartons not bearing a return authorization number, where required, will be refused.

Other conditions:
THE PROVISIONS OF THIS LIMITED WARRANTY ARE IN LIEU OF ANY OTHER WARRANTY, WHETHER EXPRESSED OR IMPLIED, WRITTEN OR ORAL, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. BOSE CORPORATION'S MAXIMUM LIABILITY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID BY YOU FOR THE PRODUCT. IN NO EVENT SHALL BOSE BE LIABLE FOR LOSS OF, DAMAGE TO OR CORRUPTION OF STORED DATA, OR FOR SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR INDIRECT DAMAGES HOWSOEVER CAUSED INCLUDING, WITHOUT LIMITATION, THE REPLACEMENT OF EQUIPMENT AND PROPERTY, AND ANY COSTS OF RECOVERING, PROGRAMMING OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH YOUR BOSE PRODUCT. This warranty is void if the label bearing the serial number has been removed or defaced.

Other legal rights:
This limited warranty gives you specific legal rights, and you also may have other rights that vary from state to state or country to country. Some places do not allow limitations on implied warranties or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

Failure to register your product will not affect your limited warranty rights.